



Required Components

- 1 Aqua TROLL 400 instrument
- 2 TROLL Com Plus
- 3 Rugged Twist-Lock Cable
- 4 Bluetooth-enabled mobile device

Getting Started

1 Install the sensors.



Twist the restrictor off the probe.



Locate the RDO sensor cap container and remove the cap.



Remove the dust cap from the RDO sensor.



Align the slotted edge of the RDO cap with the flat edge of the RDO sensor. Press the cap firmly into position.



Remove the orange plug from the pH/ORP sensor port.



Use the alignment marks to properly align the pH/ORP sensor with the port connection, and press firmly into place. Push until the sensor is completely inserted into the port.



Twist the restrictor back onto the probe.

2 *Connect to the communication device.*



Connect Rugged Cable to the TROLL Com Plus and instrument.




Instrument is ready to pair with software. Turn on the TROLL Com Plus

3 *Connect to the software.*




You must have the VuSitu mobile app to use the instrument with a mobile device. Download VuSitu from the Google Play Store or the Apple App Store.

iOS

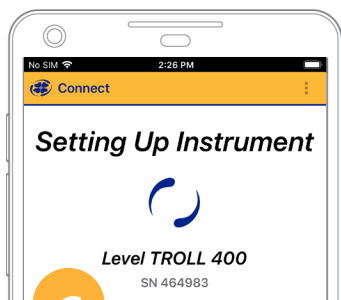


a
An iOS device automatically connects to the closest In-Situ instrument.

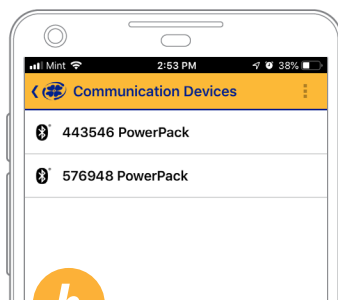


b
To connect to another instrument, press **Disconnect** and then **Choose or Add Device**. VuSitu displays a list of available connections.

Android

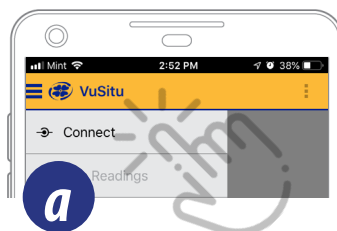


a
Launch VuSitu and tap **Connect**.

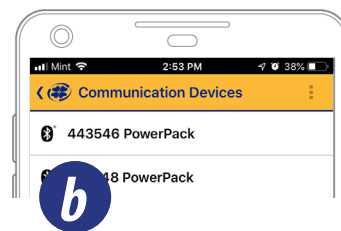

b
The app locates and displays nearby In-Situ devices.



c
Tap the serial number of the instrument or TROLL Com Plus.

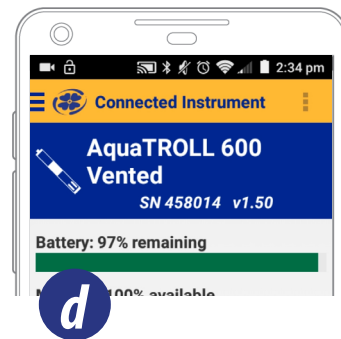

d
VuSitu displays the Connected Instrument screen when pairing is complete.



VuSitu's on-screen instructions will guide you through instrument calibration, livereadings, log setup and data sharing.

4

Learn more.

Get complete instructions about calibration, logging and working with data in the product manual. Download it from www.in-situ.com.