




### Box Contents

1. TurbiTech UVT
2. Connector Dust Cover
3. Grease

## Getting Started

### 1 Prepare instrument and deployment site.

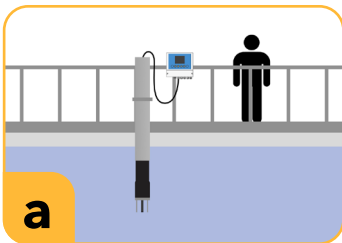

Select an installation location representative of process conditions. See manual for guidelines.



If using a threaded mounting system, remove the collar from the instrument.



Remove protective caps from instrument and cable.



Apply a small drop of grease to the O-ring if it is dry.

### 2 Connect cable and install in process.



See the following pages for the most common mechanical and electrical installation configuration. See the full manual for guidelines on choosing an installation location and additional installation options.




Align flat edges of cable and connector.



Twist and push the sleeve until you hear a click.



Install the instrument in the mounting system at the selected site in the process.

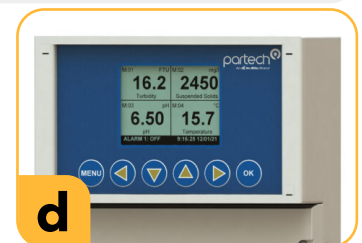

Wire instrument to 7300 monitor as described on the following pages.