



# Rugged TROLL

## Quick Start Guide



### Box Contents

1. Rugged TROLL or Rugged BaroTROLL instrument
2. Hanger cap

### Required Accessories

1. Mobile device with VuSitu mobile app
2. One of the following communication solutions:
  - a. TROLL Com Plus with Rugged TROLL Setup Cable
  - b. VuLink with Rugged TROLL Direct-Read Cable (Rugged TROLL 200 only)
  - c. Docking station

## Getting Started



Connect Rugged TROLL to one of the three available communication devices (TROLL Com Plus, VuLink, or Docking Station).

### 1 Connect instrument to communication device



Unscrew cap from instrument.



Unscrew cap from end of cable.



Attach cable to Rugged TROLL.



Connect cable to TROLL Com Plus or VuLink.

OR



Line up instrument tab with docking station slot.



Insert Rugged TROLL in docking station.



Plug docking station into your device's USB-C port.


## 2 Configure instrument in VuSitu.




You must have the VuSitu mobile app to use the instrument with a mobile device. Download VuSitu from the Google Play Store or the Apple App Store.




Connect to the VuSitu mobile app.

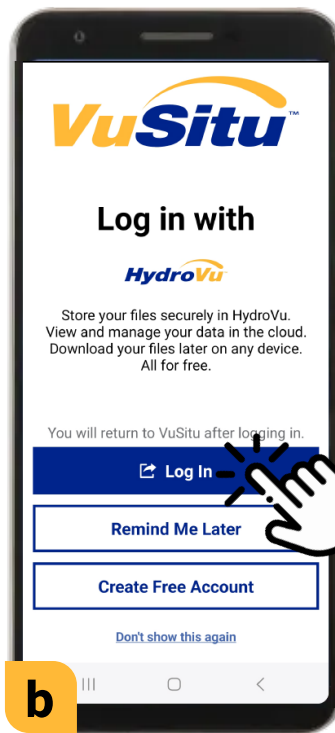

Log in with HydroVu to automatically upload files to the cloud.

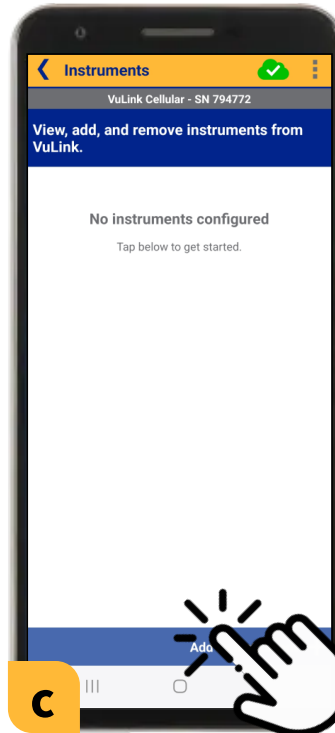

If you are using VuLink, add the instrument. Then tap the instrument to connect.

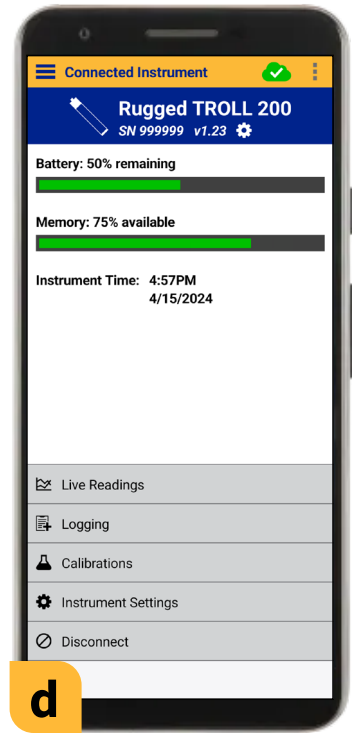

VuSitu displays the connected instrument screen.



VuSitu's on-screen instructions will guide you through instrument settings, logging, live readings, and data sharing.

## Learn More



View the full instrument manual, help videos, compliance information, and more at [www.in-situ.com](http://www.in-situ.com).